

**Morris Minor (Series II)  
Lubrication Chart**

- 1** **Every 6,000 miles (10000 Km.)**  
Clean and re-oil the air cleaner (Home)  
**Every 3,000 miles (5000 Km.)**  
*or more often in very dusty conditions*  
Clean and re-oil air cleaner (Export).
- 2** **Every 6,000 miles (10000 Km.)**  
Renew external oil filter for engine.
- 3** **Every 3,000 miles (5000 Km.)**  
On early models remove dynamo grease cap and refill with grease  
On later models add a few drops of oil to dynamo bearing through hole in commutator end bearing house.
- 4** **Every 3,000 miles (5000 Km.)**  
Withdraw distributor rotating arm and add a few drops of thin oil to opening and to advance mechanism through gap round cam spindle.
- 5** **Every 6,000 miles (10000 Km.)**  
Remove each front wheel hub disc and prise off grease retaining cap from end of hub. Fill cap with grease and replace securely.
- 6 12** **Every 1,000 miles (1600 Km.)**  
**13 15** Give 3 or 4 strokes of grease gun filled with grease
- 7** **Every 6,000 miles (10000 Km.)**  
Thoroughly clean hydraulic dampers and examine fluid level. Replenish if necessary with correct fluid.
- 8** **Every 1,000 miles (1600 Km.)**  
Inspect fluid level in brake master cylinder supply chamber and replenish with Lockheed Genuine Brake Fluid.
- 9** **Every 1,000 miles (1600 Km.)**  
Inspect oil level in gearbox and replenish if necessary with recommended oil  
**After first 500 miles (800 Km.)**  
and subsequently  
**every 6,000 miles (10000 Km.)**  
drain off old oil and refill with fresh oil
- 10** **Every 1,000 miles (1600 Km.)**  
Inspect oil level in axle through filler and replenish if necessary with recommended hypoid oil  
**After first 500 miles (800 Km.)**  
and subsequently  
**every 6,000 miles (10000 Km.)**  
drain off old oil and refill with fresh oil
- 11** **Every 6,000 miles (10000 Km.)**  
Remove rear hydraulic dampers. Carefully clean exterior and then inspect fluid level. Replenish with correct fluid if necessary.
- 14** **Every 12,000 miles (20000 Km.)**  
Apply grease gun to nipple on steering gearbox and give up to 10 strokes, but no more. Use hypoid oil
- 16** **Every 250 miles (400 Km.)**  
Inspect oil level in engine by dipstick and replenish if necessary with recommended engine oil  
**After first 500 miles (800 Km.)**  
and subsequently  
**every 3,000 miles (5000 Km.)**  
drain off old oil and refill with fresh oil
- 17** **Every 1,000 miles (1600 Km.)**  
Remove brass cap from top of carburettor suction chamber and add a teaspoonful of engine oil

